

# L-02F 4G/3G 150MB HIGH SPEED WIFI ROUTER

The following items have been included:

1. NTT DoCoMo L-02F WiFi Router
2. AC Charger Adapter
3. USB Cable
4. WiFi Protective Case
5. Clear Case
6. Equipment Case
7. Return Packet

Please return all items upon the completion of the rental period.

JCR Customer Service  
Tel. 03-5655-3770

## Charging


### ■ Battery Charge

- To charge with AC adapter LO5, attach the battery pack to this terminal and connect with cradle LO1. (→P40)
- Do not apply excessive force when inserting or pulling out the connector. Insert or pull it out slowly.
- When charging with an entirely empty battery pack, it may take a while to power on this terminal.
- The internal of this terminal may become warm and the charging may stop when data communicating during charging. In that case, turn off this terminal and wait until this terminal cools down. Then charge it again.
- Depending on the usage conditions, charging may stop before the battery level reaches 100%. In that case, remove the battery pack and attach it again. You can continue charging.
- Do not remove the battery pack while charging. If you remove the battery pack during charging, this terminal may not power on properly, or it may not be able to charge. In that case, remove the battery pack, cables from this terminal and connect them again

## Power On/Of

### Power On

- 1 When the power is off, press the power button for over two seconds  
For first time activating, "Startup Wizard" is displayed.

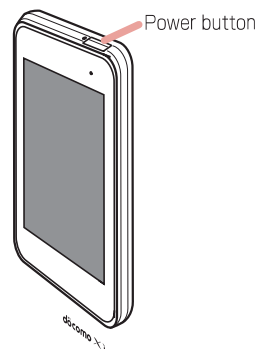

## IMPORTANT

- Do not charge this terminal for a prolonged time with its power turned on.
  - If you charge this terminal for a prolonged time with its power turned on, the battery pack will start supplying power to this terminal after finishing charging. This will reduce the actual usage time and deplete the battery. If this happens, please charge it again correctly. When charging again, remove this terminal first and connect it again

**When charging is completed, remove the power plug of AC adapter from the power outlet**

**Remove the microUSB connector of AC adapter from this terminal horizontally**

## Charging with PC

Connect this terminal to a PC with the supplied USB cable LO3 to charge this terminal on PC.

- About how to connect with a PC, refer to "Attaching to/Removing from PC"
- Depending on the condition of the PC, it may take a while to finish charging, or it may not be able to charge

# Viewing Display

The following shows the meaning of each icon displayed on the screen (press the power button when it is not displayed (→P46)).



Home screen

## 1 Signal level

Strong ←→ Weak



: Out of service/mobile networks disconnected




: Roaming



Charging (only when the power is off)



Battery is empty

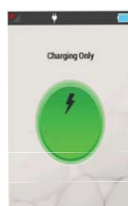


Charging mobile device



Wi-Fi function Activating



Wi-Fi function Disconnecting

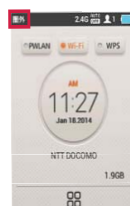

No service

## 2 Connected network type



: LTE network connected



: 3G network connected (HSDPA/HSUPA, W-CDMA)



: GSM network connected



: Connecting via public wireless



: Network via cradle connected

• During communicating, "↑" (uploading) "↓" (downloading) is displayed in white

## 3 Wireless LAN receiving level

Strong ←→ Weak



: PWLAN on

## 4 USB tethering/pocket charging mode



: Connected to cradle

## 5 New software



**2.4G/5G**: Wi-Fi frequency band 2.4 GHz/  
Wi-Fi frequency band 5 GHz/

## 7 Wi-Fi auto off timer ON (→P109)



: Connected clients

## 9 Remaining battery level

Full ←→ Empty



: Charging



: Battery is almost empty. Please charge.

**10 PWLAN** Touch and hold this to switch public wireless LAN on and off. When Wi-Fi turned off, it cannot be turned on.

**11 Wi-Fi** Touch and hold this to switch wireless LAN on and off.

**12 WPS** Use WPS to set up Wi-Fi. Touch and hold it to activate. When Wi-Fi is turned off, it cannot be turned on.

**13 Network display** Displays the current connected network name.

**14 Data communication amount display (→P118)**

**15 Menu** Tap to display menu screen.

■ E | of state display